

PYRAMID SERIES PITCHING, CARE AND STORAGE INSTRUCTIONS

ONE PLANET


FINDING THE IDEAL SPOT

- > Look around! Select a site that is flat, clear of rocks, twigs and other hard or sharp objects.
- > Look down! Find a position that will drain well if it rains.
- > Look up! Check that nothing can fall on your tent. (Stay away from tree limbs, especially Australian gums)

TIP: if you arrive to camp early and the sun is shining bright, consider pitching your tent closer to dusk. UV exposure deteriorates all fabrics and keeping your fly out of the blazing sun will maximise its useable life.



Scan the QR code to view instruction video on YouTube

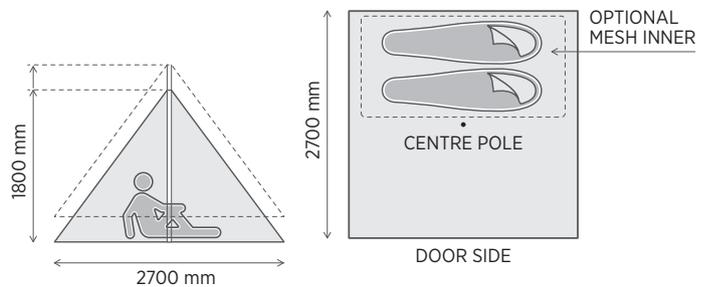

PITCHING INSTRUCTIONS

1. To put up a Mid, start with the right angles: find the four corners and peg them out. Put the tent bags in your pocket so they don't fly away! Insert pegs into the ground on a 45° angle, pushing them all the way in, don't use your foot to push or stamp in pegs.





2. Unzip the door and put the pole into the apex of the tent. (If you're using our walking pole converter, see instructions.)

- a. The pole adjusts in 50 mm increments. For summer or increased ventilation, we recommend a higher pitch. For winter or cold weather, we recommend a lower pitch. Adjust the peg points as required.




3. Peg out the halfway points on each side
4. Peg the guylines out, follow the angle made by the guyline pocket

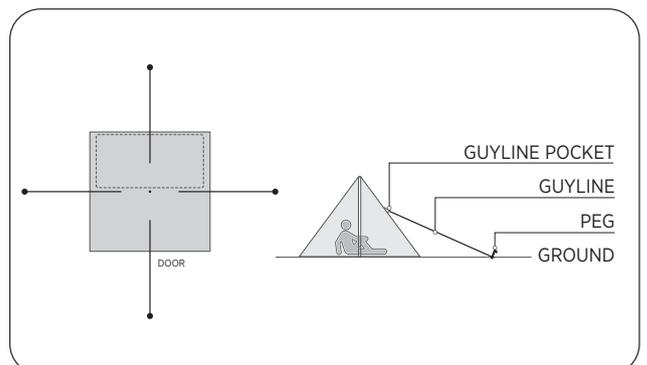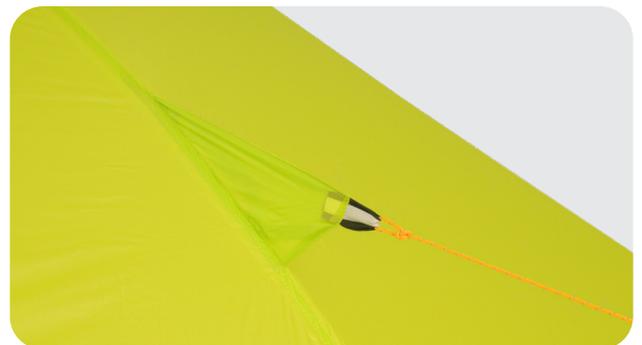

USING AN INNER (OPTIONAL)

A bathtub Footprint or Mesh inner is available to give added protection. Both are pitched in a similar way.

1. Set up your add-on in the back half of the Mid.

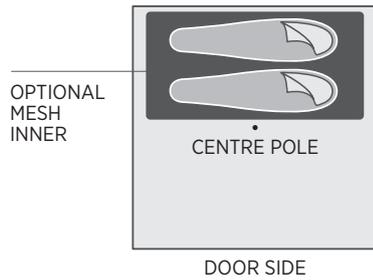

2. Peg out all four corners. (In some cases you may be able to attach the elasticated peg points to the pegs used for the fly)

For Mesh inners: attach the top hook into one of the poles adjustment point holes.



PACK-DOWN INSTRUCTIONS

Empty the tent, remove your belongings and any foreign materials. Check for ants and bugs, these critters if inadvertently rolled into a tent will try to chew their way to freedom.

There are lots of ways to pack up your tent, including the simplest – simply stuff it into the bag. The approach outlined below keeps things neat and tidy and makes life easier next time.

Inner

1. Close the door and then unclip all the connections from the fly, pegs and poles
2. Unpeg all corners and place all pegs into the pole/peg bag
3. Fold the inner neatly into a rectangle the width of the inner bag, brushing off mud and dirt as you fold
4. Just before you finish rolling fold the end with peg points in to create a neat edge.
5. Slide and twist neatly into the bag.

Poles

1. Remove and collapse down the poles. Place into the pole/peg bag.

Fly

1. Unpeg the fly and all guy lines. Tuck guy lines back into their storage pockets. Place pegs into the pole/peg bag
2. Fold the fly neatly into a rectangle the width of the collapsed pole
3. Roll around the tent pole
4. Just before finishing the roll, fold the end in to the inside, including webbing and peg points, this creates a neat finish.
5. Slide and twist neatly into storage bag.

Any further questions? If you have any further questions regarding ONE PLANET tents, visit oneplanet.au

STORAGE AND AFTER TRIP MAINTENANCE

After each trip, spend a few minutes looking after your tent: it will help it last longer and be in better shape for the next trip.

- › Never put your tent away damp
- › Clean poles and pegs by washing them in warm water using a soft cloth. If you've been in a salty location, soak and then wash thoroughly, ensuring you run fresh water through the pole ends.
- › Clean zips and sliders, checking for grime and grit. Brush and lubricate.
- › Remove debris from the inside of the tent by turning the inner inside out and brushing.
- › Wipe down the inside and outside of both inner and fly with a soft cloth to remove visible dirt.
- › Hang your tent up (or pitch it – your call) in a warm, dry and preferably shady area until it is completely dry.
- › Store in a cool dry place. We recommend storing the fly and inner in a loose bag rather than tightly rolled.
- › During long-term storage remember to air your tent regularly (every 4-6 months) or more often in humid environments.